


## WALL / CEILING BRACKETS

CODE:70052

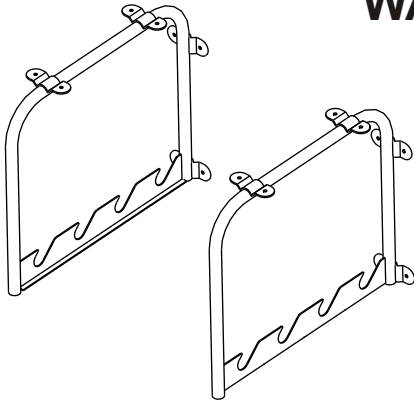


These brackets can be mounted on the wall , on the ceiling, on "Autopoles" or on sturdy stands.

They can support 4 expander systems.(Motorised or manual (chain drive))


Material : Steel  
Finish : Powder Coated  
Weight :

### DISTANCE BETWEEN THE BRACKETS

The center-to-center distance between the brackets should be 28 cm (11") more than the width of the backdrop roll.  
For example : Paper backdrop rolls are usually available with a width of 277.7 cm (9 feet / 108") . To accomodate such a paper roll the brackets should be mounted 302.5 cm (119") apart.

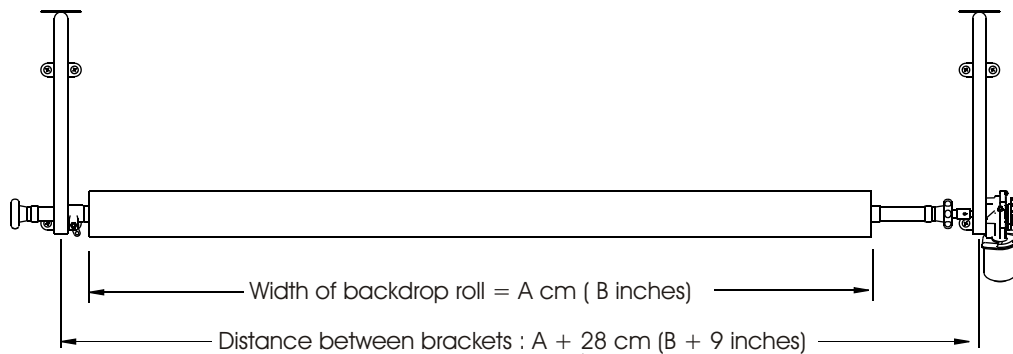

#### MOUNTING ON THE WALL

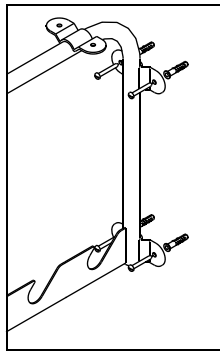


Drill four holes in the wall (with a 1/4" masonry drill bit). The holes should be spaced as per the holes of the mounting plates of the bracket.

Insert the wall-plugs (provided) into the holes

Affix the bracket to the wall by tightening the screws (provided) into the wall plugs.

**NOTE : ENSURE THAT BOTH THE BRACKETS (THE 'LEFT' AND THE 'RIGHT' SIDE) ARE AT THE SAME LEVEL**

#### MOUNTING ON THE CEILING

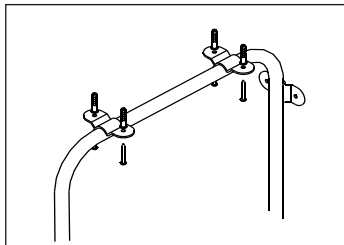


Drill four holes into the ceiling (with a 1/4" masonry drill bit). The holes should be spaced as per the holes of the ceiling mounting plates of the bracket.

Insert the plastic plugs (provided) into the holes

Affix the bracket to the ceiling by tightening the screws (provided) into the plastic plugs.

**NOTE : ENSURE THAT BOTH THE BRACKETS (THE 'LEFT' AND THE 'RIGHT' SIDE) ARE AT THE SAME LEVEL**

**NOTE: THE CONSTRUCTION / MATERIAL OF THE CEILING SHOULD BE STRONG ENOUGH TO BEAR THE DOWNWARD WEIGHT OF ALL THE BACKDROP ROLLS, THE MOTORIZED EXPANDERS AND THE BRACKETS.**

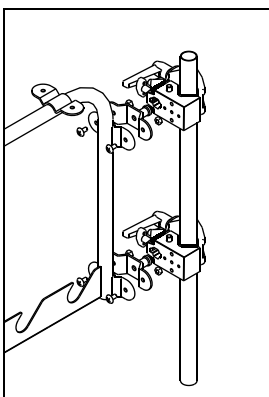

#### MOUNTING ON 'SUPER CLAMPS' (to mount on 'Auto-Poles' or stands)

Affix the spigot bracket to the mounting plates using M5 X 8 screws ( as shown)  
The spigot brackets can then be inserted into "Super Clamps" and the Super clamps can be clamped on to "Auto-Poles" or sturdy stands.